


# RONGTA USER MANUAL

## 80MM THERMAL RECEIPT PRINTER ACE H2

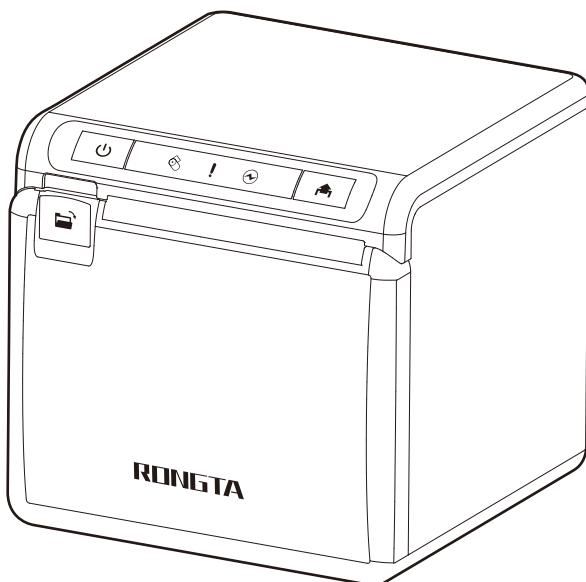

# Catalogue

---

---

<b>Introduction .....</b>	<b>2</b>
<b>Safety Instructions.....</b>	<b>3</b>
<b>I. Product Introduction.....</b>	<b>4</b>
1.1 Product Specifications.....	4
1.2 Unpacking List .....	5
1.3 Appearance and Structure .....	6
<b>II. Installation and use .....</b>	<b>7</b>
2.1 Power Connection.....	7
2.2 Loading Paper.....	8
2.3 Basic Functions.....	9
<b>III. Drive installation instructions .....</b>	<b>11</b>
3.1 Driver Download.....	11
3.2 Installing Drivers on Windows .....	11
3.3 Port Direct Drive.....	12
3.4 Set up and test the printer .....	13
<b>IV. Printer setup tool instructions.....</b>	<b>23</b>
4.1 Tool Download.....	23
4.2 Usage Instructions .....	23
4.3 Connecting a Printer .....	23
4.4 The "Download" function in the main screen .....	25
4.5 The [Set Printer] function in the main screen .....	26
<b>V. Page change parameter operation description.....</b>	<b>38</b>
5.1 Obtaining the IP address of the Printer .....	38
5.2 Connect the printer.....	38
5.3 Change parameter .....	39
5.4 Set Ethernet port parameters .....	40
<b>VI. Clean the printer .....</b>	<b>42</b>
6.1 Clean print head .....	42
6.2 Cleaning Sensors.....	42
6.3 Clean the printing roller.....	43
<b>VII. Troubleshooting .....</b>	<b>44</b>
7.1 Indicators on the control panel are off.....	44
7.2 The indicator is normal, but the printer does not print .....	44
7.3 Clear paper jam .....	45
7.4 Clearing clip .....	45
<b>Appendix 1 Interface information .....</b>	<b>46</b>
<b>Appendix 2 Description of special connection functions .....</b>	<b>50</b>

# Introduction

---

---

Thank you for purchasing our thermal ticket printer. This thermal ticket printer takes reasonable Safe, reliable and efficient printing quality at an affordable price. At the same time, the printer has strong functions and easy operation It is widely used in shopping malls, supermarkets, hospitals, restaurants, banks, gas stations, road and bridge tolls and other fields. This manual explains in detail how to install and use the printer, and describes in detail how to perform the printer Setup and maintenance, and provide solutions to common printer failures.

## Symbolic convention

Symbol	Instructions
	Note Provides additional information to emphasize or supplement important points in the main text.
	Indicates a warm reminder

## Version record

Version number	Release date	Instructions
V1.0	2023.12	This is the first official release

 The illustrations and descriptions used in this manual may differ from the actual ones.

# Safety Instructions

---

---

Before operating and using the printer, please carefully read the following items and strictly observe the use rules.

- ① Please install the printer on a stable surface to avoid printer suffered from any vibration and shocks.
- ② Stop using keeping the product in any case of unusual circumstances such as the presence of high temperature, high humidity and serious pollution.
- ③ Connect the printer's power adapter to an appropriate grounding socket.  
Avoid using the same socket with large motors or other equipment that may cause voltage fluctuation of power supply.
- ④ Do not get the product wet. Do not insert foreign objects(e.g. metal) into the product, and once it occurs, immediately turn off the power supply.
- ⑤ Never use the printer without paper, otherwise it will seriously damage the printing rubber roller and thermal head.
- ⑥ Unplug the product from the power outlet if the printer is idle for a long time.
- ⑦ Do not disassemble or modify the product personally.
- ⑧ Use only the power adapter specified in this instruction.
- ⑨ In order to ensure the printing quality and prolong the service life of the product, it is recommended to use the recommended or equivalent thermal printing paper.
- ⑩ Do not plug/unplug the product with the product powered on.
- ⑪ When plugging and unplugging the printer power cord, please hold the arrow position of the printer power connector with your hand, not the cord of the printer power cord.
- ⑫ Please keep this manual for the future use and reference.

## Safety warning

 **Note:** The tearing blade has a sharp edge, please be careful not to touch to prevent cuts.



 **Warning:** The print head is a hot part, during the printing process or just after printing, Do not touch the print head and surrounding parts, children must use it under adult supervision.

 **Warning:** Do not touch thermal printhead surfaces and connectors. Avoid electrostatic damage to the print head.

# I. Product Introduction

## 1.1 Product Specifications

Model	ACE H2
Printing method	Thermal line printer
Printing speed	196mm/s
Printing paper width	79.5±0.5 mm
Effective resolution	203 dpi (8 dot/mm)
Outer diameter of printing paper	80 mm
Thickness of printing paper	0.06-0.08mm
Effective printing width	72mm or 48mm (Alternative: compatible with 58mm paper)
Dot density	576dot/line or 384dot/line
Character size	ASCII Font A: 12x24 ASCII Font B: 9x17 Chinese character 24x24
Line space	3.75mm(Use the command to adjust the line space)
Size of receive buffer	Page mode:1M
Print character	
ASCII character set	12x24 dot, 1.25 (width)X3.00 (height)mm
National Standard Class I and II Chinese Character Font	24x24 dot, 3.00 (width)X3.00 (height)mm
Type of bar code	UPCA/UPCE/EAN13/EAN8/CODE39/I25/CodeBar/CODE128/CODE93/CODE11/MSI/1DRC/QR/PDF417
Extended character table	Pc437、Katakana、PC850、PC860、PC863、PC865、WPC1252、PC866、PC852、PC858 etc., 48 international languages in total
Power supply	
Power adapter	AC 100 ~ 240V
Input power supply	DC 24V 2.5A
Cashbox output	DC 24V 1A
Service life	
Service life	The service life of print head: 150 kilometers; The service life of inner diffusion knife: one million times
Environmental requirements	
Working environment	Operating temperature: 0~45°C, operating humidity: 20~90%
Storage environment	Storage temperature:-10~60°C, storage humidity: 10~90% (Except paper rolls )
Environmental conditions	
Drive	WIN2003/WINXP/WIN7/WIN8/WIN10/LINUX/Mac
Print command	ESC/POS/OPOS command compatible
Character printing	It supports double width and double height printing of AN K characters, custom characters and Chinese characters; adjusts dot patterns of character spacing for printing;
printing of dot patterns	It supports printing of dot patterns with different densities and downloaded graphics
Diffusion knife	Automatic diffusion knife

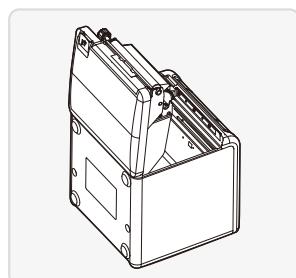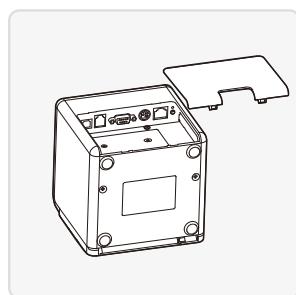

The pictures are for reference only, please subject to practicality

## 1.2 Unpacking List


Once you receive the printer, first check to see if the printer was damaged during shipping. You can check the packing box, The appearance of the printer and whether the accessories are damaged. In the event of damage to the carriage, file a written claim with the carrier immediately. Next, please check the accessories according to the "Quick Installation Guide" provided with the product. If any accessories are missing, Please contact the seller immediately.

 Main machine	 Power adapter	 Power cord	 Communication cable
 Quick Installation Guide	 Paper roll	 58mm paper bin (optional)	


☺ The pictures are for reference only, please subject to practicality.

## 1.3 Appearance and Structure


### □ Front View

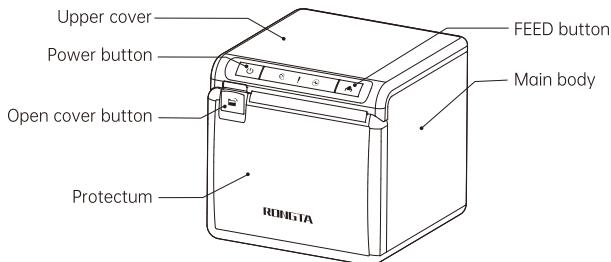

### □ Rear View

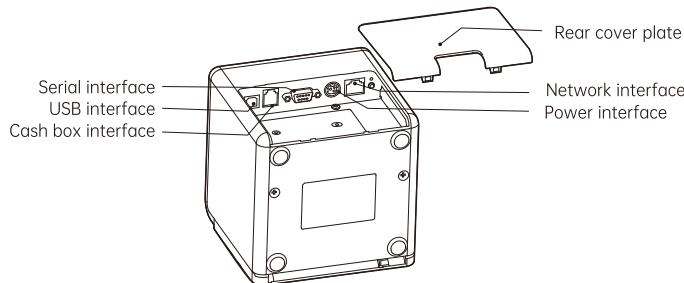

### □ Inside View

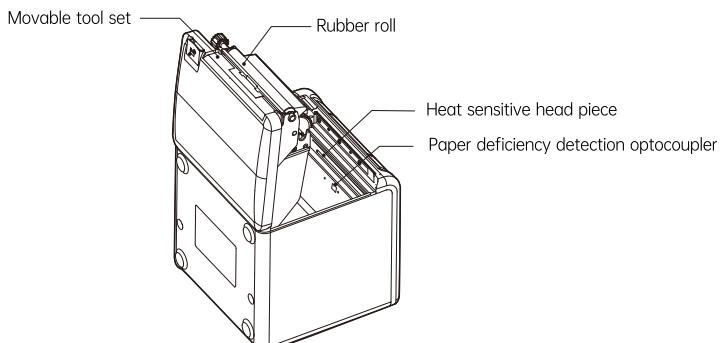

## II. Installation and use


---

### 2.1 Power Connection

- (1) Make sure that both the printer and the PC host are turned off, plug the matching data communication cable into the printer's data interface, and plug the other end into the serial port/parallel port /USB/ network port of PC host.
- (2) If equipped with an electrically openable cashbox, insert the RJ-11 connector on the cashbox into the cashbox interface of the printer (the specifications of the cashbox must conform to the printer cashbox drive specifications).
- (3) Connect to the special power adapter of the printer.

**Use the special power adapter for the printer.**

**The connection diagram is as follows:**

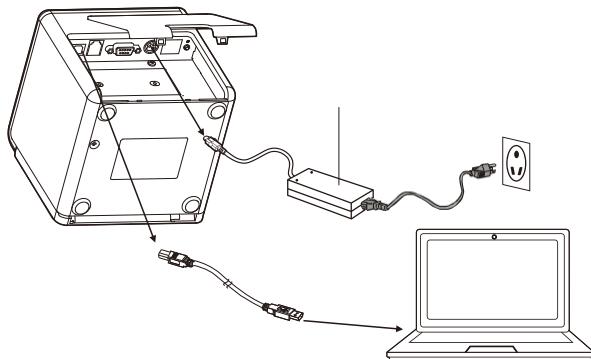

#### **⚠ Attention:**


- (1) First plug the power plug DC24V of the printer, then switch on the AC220V power supply, and then turn on the power switch. Do not reverse the sequence, otherwise the machine will be damaged.
- (2) Using an improper power adapter will make the printing quality worse and even damage the printer.
- (3) Do not connect the telephone line to the cashbox interface, otherwise the printer and telephone may be damaged.
- (4) When plugging in the printer power cord, please hold the arrow position of the printer power connector with your hand (do not plug in the cord of the printer power cord with your hand). Forcibly plucking the flexible cord of the printer power connector or pulling the printer power cord may cause damage to the printer or the power adapter.

## 2.2 Loading Paper

The ACE H2 thermal receipt printer uses 80mm thermal paper rolls and adopts an easy paper loading mechanism, which is very convenient for paper loading.

### The Installation Method of Thermal Paper is as Follows:

- (1) Open the front cover of the printer.
- (2) Confirm to open the front cover of printer.
- (3) Place the paper roll and make sure the print side of the paper roll is facing forward; pull out a part of paper beyond the front cover.
- (4) Close the front cover and press forward gently until the front cover closes with a "click" sound.

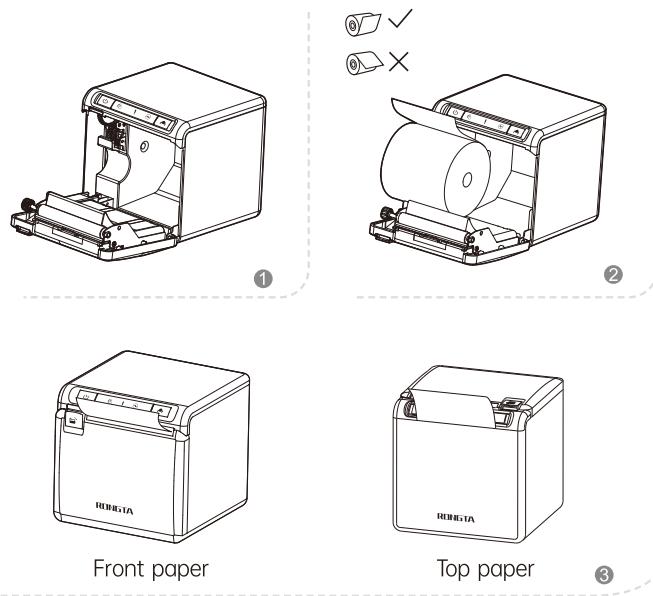

⌚ Note: The printer can be divided into front paper and top paper.

## 2.3 Basic Functions

### (1) Power switch

The power button is used to power on or off the printer.

The power key of the printer is located on the front of the printer.

Press and hold the power button to open the printer.

Press and hold the power button to turn off the printer.

 Note: Turn on the switch only after the power is connected.

### (2) Buttons and indicators

Keys and indicator panel are shown as follows:



Button and indicator function description:

 Power switch key

 Light (red) : Paper test light

Printer paper detection indicates that the printer flashes when it is out of paper.

Paper sensor detects paper and turns off.

 Light (red) : Error indicator

Printer error flashing indicator, such as paper shortage, paper jam, print head overheating, print head error, or other anomalies.

 Indicator (green) : Power indicator

When connected to the power supply, it will be steady on.

When connected to the WIFI interface, it will blink when the connection is not successful.

 Button: Paper feed button

In the standby state, press the feed button to feed paper continuously.

During the printing process, the feed key is invalid


Press and hold this button before powering on the printer to perform printer self-check after powering on the printer.

 Open cover button identifier

### (3) Printer self-test

The self-test can detect whether the printer is working properly. If the self-test list sample can be printed correctly, it indicates that everything is normal except for the connection interface with the host, otherwise it needs to be repaired. The self-test will print out the software version number, printing density, interface form, English characters and some Chinese characters in sequence.

**The operation method of self-test:** after the printer is connected, press and hold down the paper FEED button and then turn on the printer power. First, the printer reset detection. After the reset is completed, release the feed button less than 5 seconds, and then the printer will self-test and print out the self-test list sample.

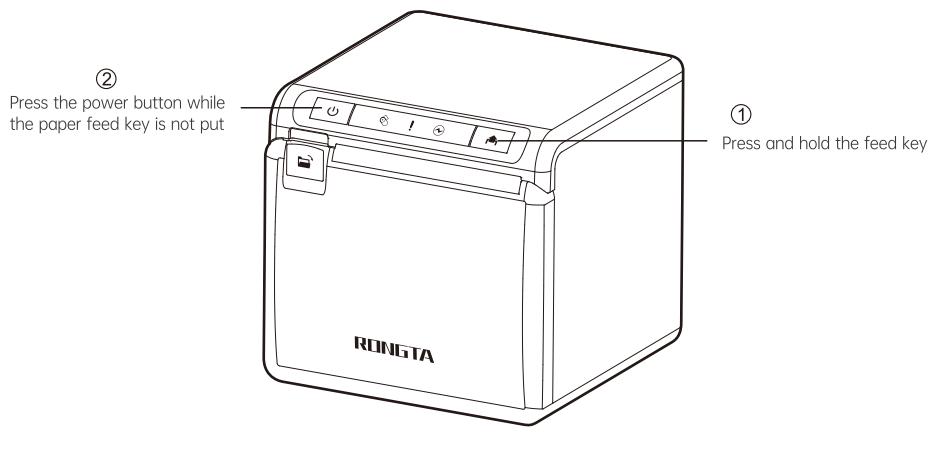

## III. Driver installation instructions

### 3.1 Driver Download

(1) Go to [www.rongtatech.com](http://www.rongtatech.com)

(2) Click Service and Support, find the driver download: Thermal ticket printer driver (58, 80 series) Click download.

There are two kinds of thermal paper printer driver way, a Windows9x / 7/8/10 / ME / 2000 / XP/Linux/Mac under direct install driver, another is to use port direct drive.

### 3.2 Installing Drivers on Windows

 Note: Before installing the driver, ensure that the power supply is connected and the USB cable is connected to the computer


Add a printer in Windows, and specify the driver file in the driver disk to Windows, you only need to call the print command in the program to start printing.

Run  to install the printer driver. The dialog box shown in the figure below pops up:




(2) Select the installation language and click "OK", as shown in the figure above.

Dialog box as shown below: click [Install]

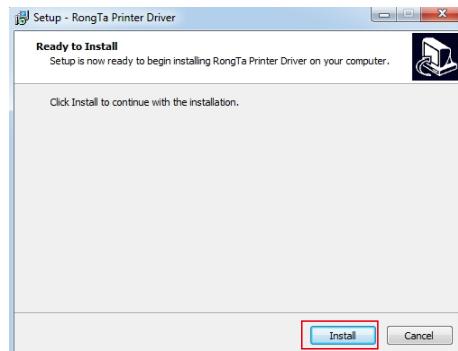

(3) Finally click as shown in the image below [Finish]

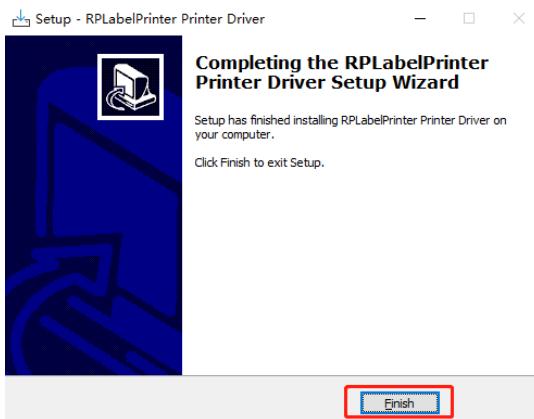

At this point, the printer driver installation is complete.


### 3.3 Port direct drive

In this way, there is no need to use the driver, only need to output the characters directly to the port, and by the printer's internal hard character library to achieve character conversion printing. Using the port direct drive mode, its printing mode is also changed from the page printing mode to the line printing mode, which makes the printing control more convenient. If used In the port direct drive mode, you need to use the command set to control the printing of the printer. For the specific print command set supported, please refer to the "Print command" option in the "Technical Parameter Table" on page 6 of this manual.

## 3.4 Set up and test the printer


### (1) Set printer properties

After installing the printer driver, view "Start"->"Control Panel"->"Printer and Fax"->"Printer Properties" of RONG TA 80mm Series Printer. The "Printer Properties" window will pop up, as shown in the figure below:

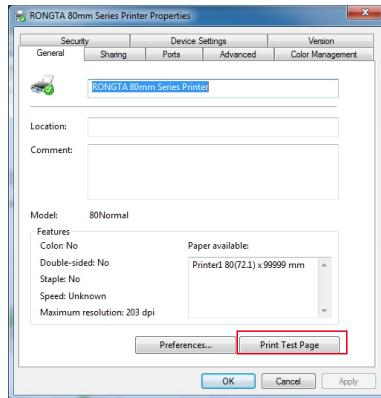


### (2) Print Test Page via Serial Port


Select "Port" as shown in the figure above. As shown in the figure below:

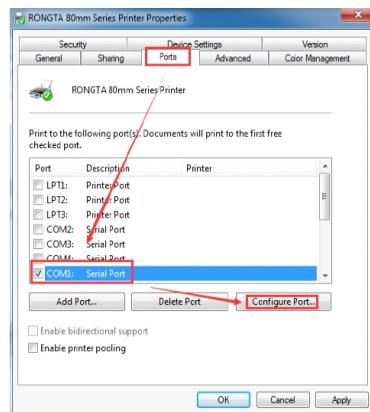


Select the corresponding serial port (take COM1 as an example), select COM1, and then select the configuration port. The following dialog box appears: Set the value of bits per second to be the same as the printer baud rate. If the baud rate is 19200, then set the value of bits per second in the serial port properties selected for printing as 19200.

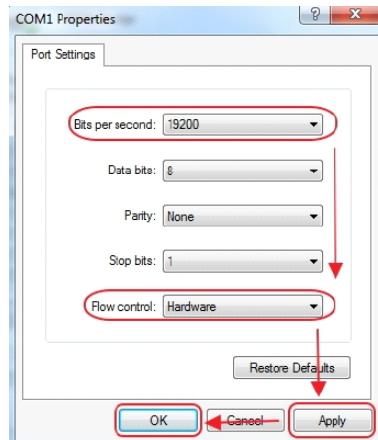

After settings are completed, click "OK" to save the settings. Back to the "Printer Properties" window, select "Apply (A)", as shown in the figure below:

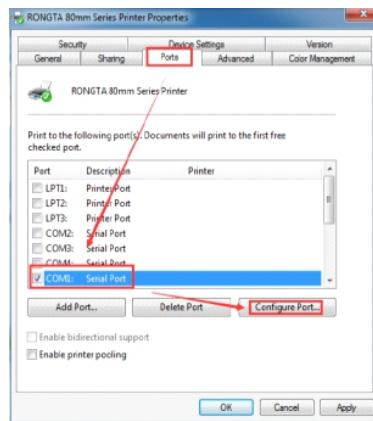


After the serial port configuration is completed, select "General", as shown in the figure below:

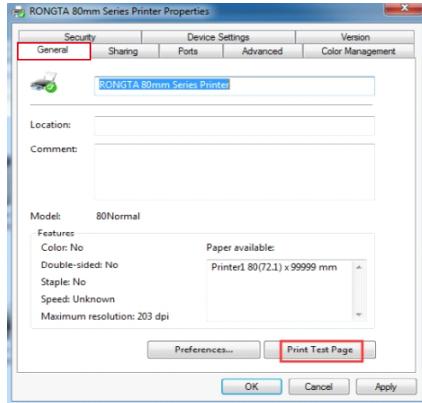

Select "Print Test Page (T)". If the test page can be successfully printed, it means the printer has been connected to the PC and configured correctly, and the printer port can be used normally.


### (3) Print Test Page via USB Port

Print Test Page via USB Port

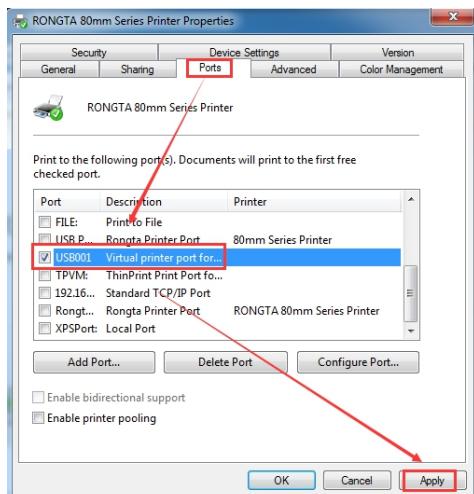

Then select "Apply" as shown in the figure above:

Then select "General" as shown in the figure below:

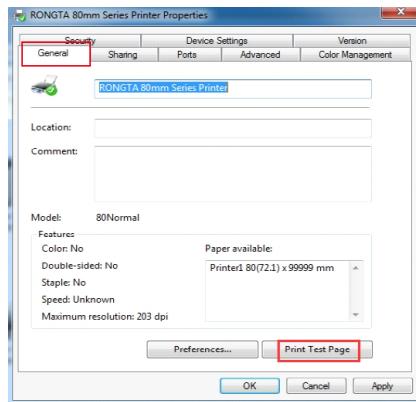


Select "Print Test Page (T)". If the test page can be successfully printed, it means the printer has been connected to the PC and configured correctly, and the printer port can be used normally.


#### (4) Print Test Page via Network Port

Open the Printer Properties


Select "Add Port " as shown in the figure above.

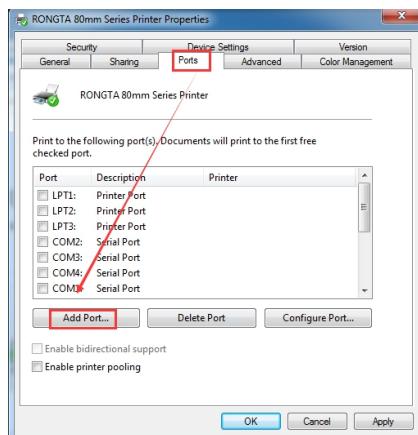


Select "New Port ...", as shown in the figure above.

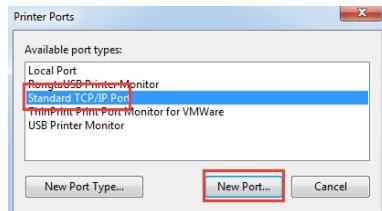

Select "Next", as shown in the figure above

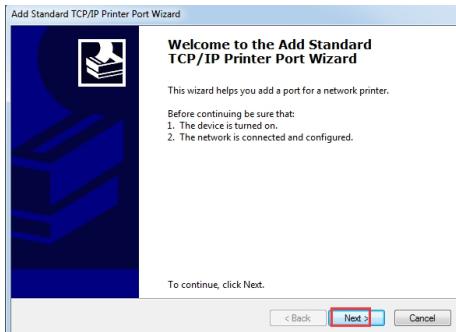

Then enter "192.168.1.87" after the "Printer Name or IP address (A)", and then select "Next", as shown in figure above

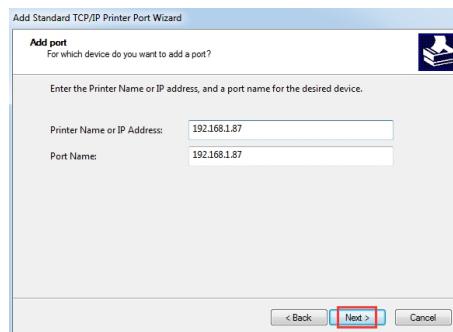


Then select "Next ", as shown in figure above




Then select "Finish", that is, a standard TCP/IP port is added.



Select  192.16... Standard TCP/IP Port then select "Apply (A)" as shown in the figure above, select "General" as shown in the figure below.

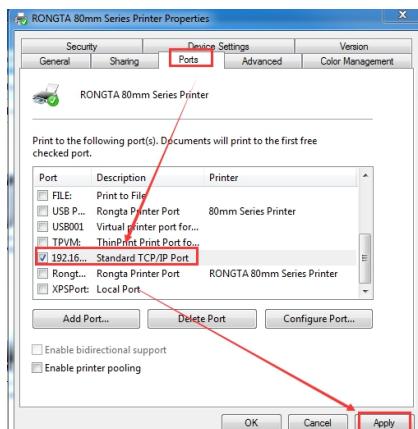


Select "Print Test Page (T)". If the test page can be successfully printed, it means the printer has been connected to the PC and configured correctly, and the printer port can be used normally.

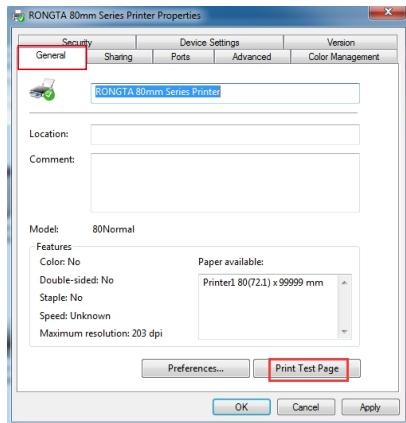

## (5) Print Test Page via Parallel Port


Select a port among "LPT1: Printer Port, LPT2: Printer Port, LPT3: Printer Port". The port connected with a parallel port line should be selected. Take "LPT1: Printer Port" as an example below.

Select "Apply", as shown in the figure above.

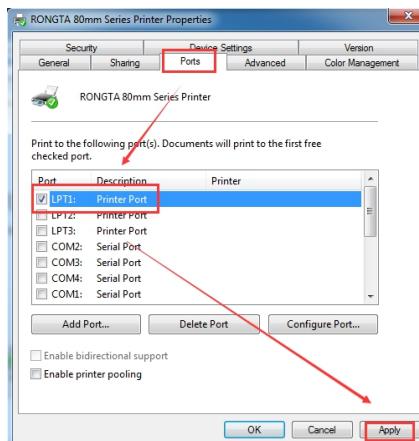


Select "General", as shown in the figure below.

Select "Print Test Page (T)". If the test page can be successfully printed, it means the printer has been connected to the PC and configured correctly, and the printer port can be used normally.

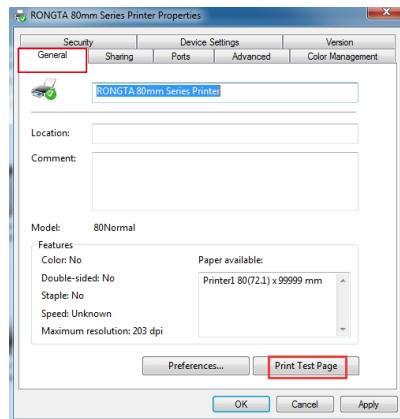


## (6) Diffusion knife and Cashbox Settings

Select the Printer Properties, and click "Print Preference Pages"

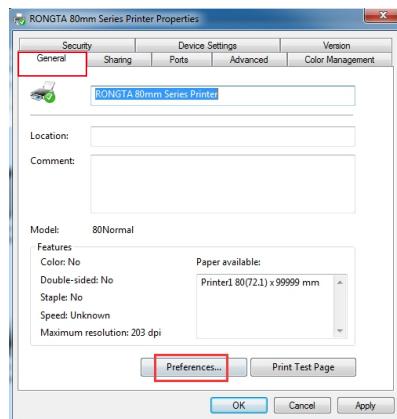


The driver has been set to automatically cut paper and open the Cashbox by default. If you need to change the settings, please follow the instructions below: Select "Paper/Quality", choose whether to cut paper in the "Paper Source" option, for example Report (Cut) is automatic paper cutting, the diffusion knife will automatically cut the paper after the test page is printed. The "Media" option is to choose whether the Cashbox works. After the selection, click "Apply" and "OK" to complete the settings.

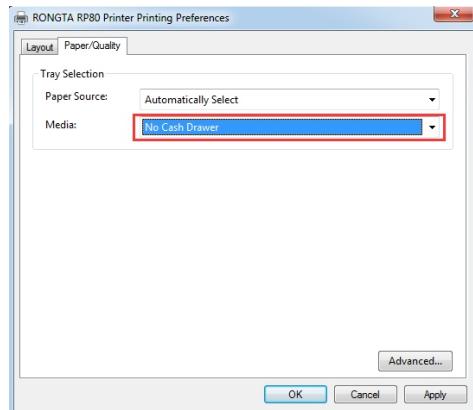


## (2) Voice Function


The function only supports some models.

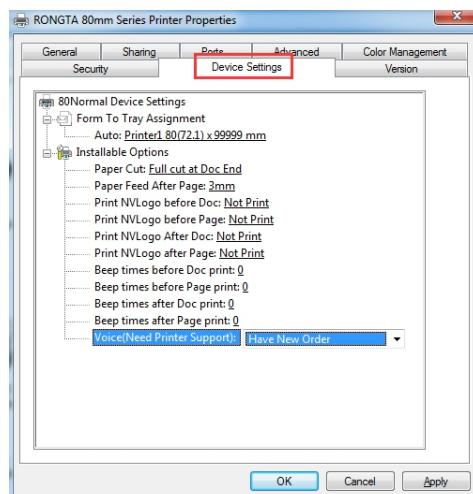

Select the Printer Properties, and click "Device Settings"  
Click the Voice Function, select the ringtone to be set, and click "Apply".

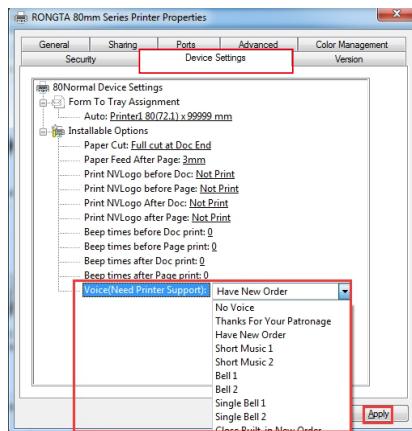

Click "General" and select "Print Test Page", and there will be voice when printing.

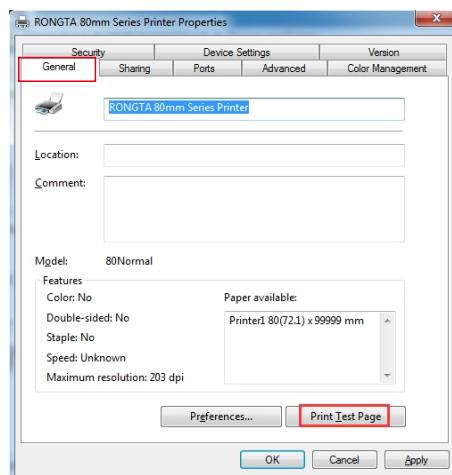

## IV. Printer setup tool instructions

### 4.1 Tool Download

- (1) Go to [www.rongtatech.com](http://www.rongtatech.com)
- (2) Click Service and Support, find [Tool download], find [thermal ticket printer tool] and click download

### 4.2 Usage Instructions


The printer must be ready before using the setup tool:

- (1) Make sure that the printer is connected to the power supply and is in the shutdown state;
- (2) The communication cable used is inserted into the communication connection plug of the corresponding printer;
- (3) Confirm that the printer has installed the paper roll;
- (4) Turn on the power switch;

### 4.3 Connecting a Printer

Double-click tool [RongtaPrinterTool.exe], the following interface appears, as shown in the following picture, there are 3 ways to connect to the printer.


**(1) If the printer is connected to USB**, then directly select USB, and then [set the printer] or the program [download] (if the printer is connected to USB, then USB can be selected, if not, then the USB option is gray, can not be selected, as shown in the following figure).

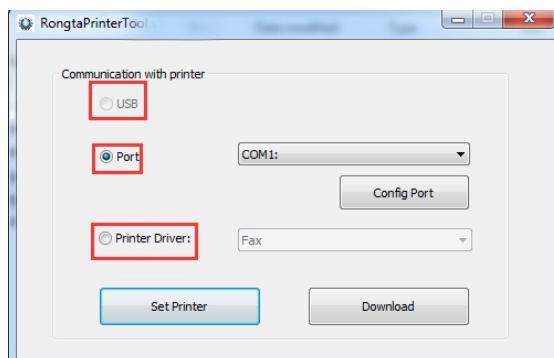


## (2) Connect the printer through the port

The port can be connected to the printer after [ Port Settings] through the serial port or network port, and then [Set printer].Or carry out the program [Download].

a. Select a serial port and configure the serial port

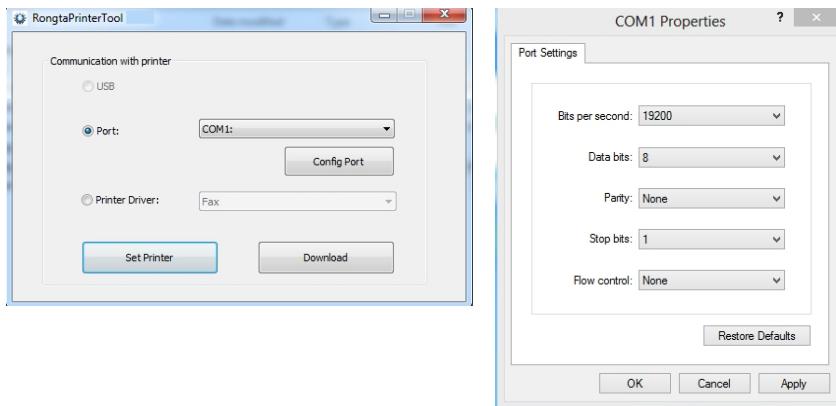


b. Select a network port, set an IP address, and connect the printer

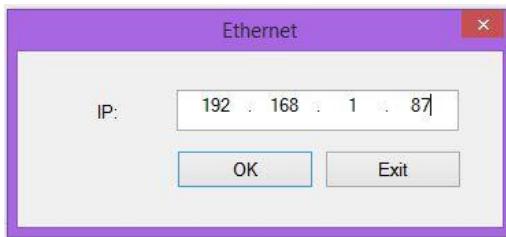

(3) Connect the printer through the common driver connection method (need to select and set the corresponding port of the driver first), and then [set the printer] or the program [download].

## 4.4 The "Download" function in the main screen

(1) After clicking [Download], the following interface appears to update [program]. Click [Open file], select the corresponding program path, and click "Update" to update the program.

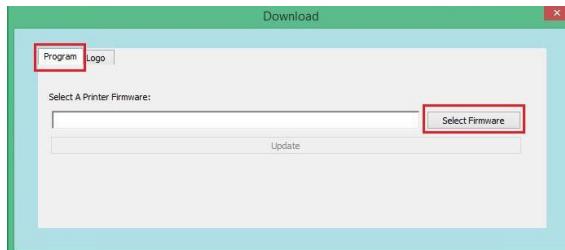

(2) Add "Picture". Select "LOGO", click "Add", select the corresponding path, and add LOGO to the printer.

Note: In this tool, the added LOGO only supports pictures in bmp format (black and white bitmaps, or 32-bit full-color bitmaps), and other formats are not supported. The requirements for the supported bitmap size are as follows:

a. The picture size must be less than 64k

b. Picture width requirements are:


The width of 80 shall be less than 576 pixels.

The width of 58 shall be less than 384 pixels.




## 4.5 The [Set Printer] function in the main screen

Select [Set Printer] in the main screen

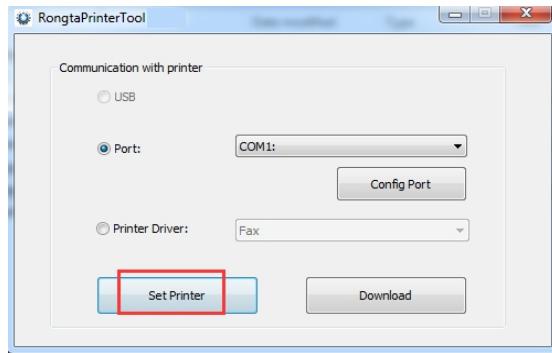


It mainly includes 14 interfaces.

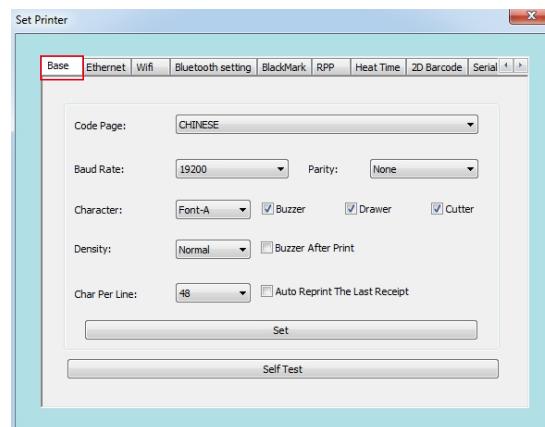

## (1) Basic Settings


User can set the printer's language, baud rate, font, print density, cashbox, diffusion knife, etc. according to his needs, and then perform "Print Self-test Page" to check whether the change is complete.

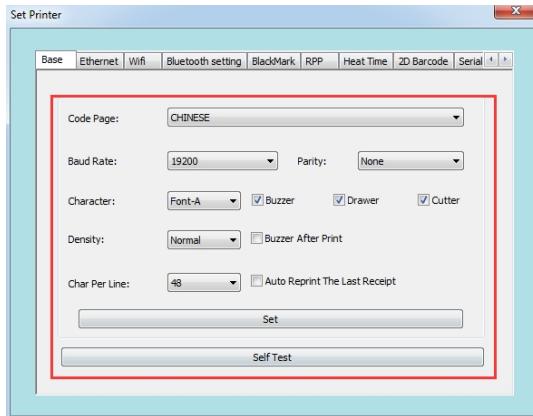

 Note: If you use a serial port for printing, after the baud rate is changed, you need to return to the main screen to reconfigure the baud rate of the serial port before using the setting tool again.

## (2) Ethernet

- a. Set the IP address of the printer, change it to "192.168.1.87", and set the communication port
- b. Set the printer's subnet mask and change it to "255.255.255.0"
- c. Set the printer's gateway as "192.168.1.1"
- d. Set the printer's DHCP function. The printer's DHCP is disabled by default. If necessary, it can be enabled to make the printer automatically obtain the address
- e. Set the Mac address and set the network transmission rate.

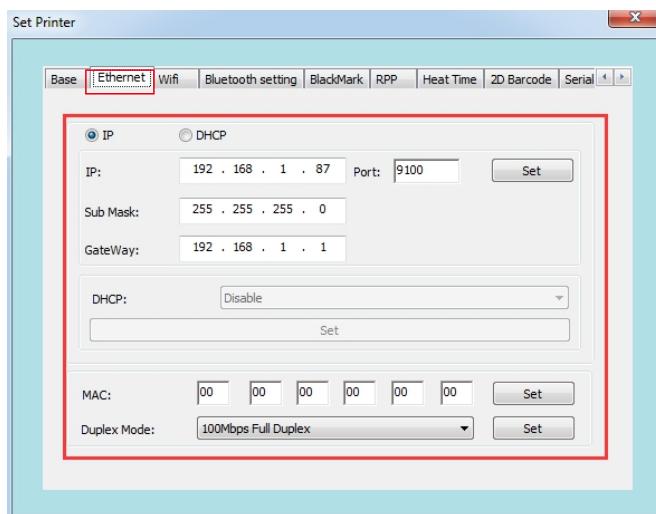

**⚠ Attention:** Before setting the web address, if the printer is connected with one of following two methods: "One" uses the "Internet port", "Two" the IP address in the print driver mode. After changing the IP, the printer's IP address is changed. At this point, the printer is disconnected from the tool, and the IP address of the tool needs to be reset before connecting the printer. Other connection methods are not affected.

### (3) WiFi Settings

If the printer has wireless, you need to set the parameters for WIFI.

- **Wireless router setting instruction**

a. Set the SSID, namely the router name, in the WiFi settings of the router.

b. Wireless network security settings

1) Do not enable wireless security" can be selected;

2) If encryption is required, WPA-PSK/WPA2-PSK is recommended. The authentication type can be one of "Auto", "WPA-PSK", and "WPA2-PSK".

The recommended encryption algorithm is AES. PSK password can be set by yourself.


3) Wireless network security settings can also use WEP type, which is not recommended. If you have to adopt this authentication type, you can choose one of "Auto", "Open System", and "Shared Key". For the WEP key format, please select "ASCII code". The password can be defined by yourself.

- WiFi printer parameter setting instruction

- 1) Open the integrated setting tool " RongtaPrinterTool " included in the CD
- 2) According to the instruction manual of this setting tool, first make sure that the printer is connected.
- 3) Open the setting tool and select "WiFi".
- 4) Input the SSID (WiFi name) to which the printer is connected, and the corresponding mode.
- 5) Enter the WiFi encryption type and the WiFi password, as shown in the figure. For example, add WiFi rdhz, with the password encryption type of WPA-PSK, enter the WiFi password, and click "Set".

6) After clicking "Set", the printer will print the set WiFi parameters. Please print a self-test page and compare the printed WiFi parameters with those of the router. If matched, please wait patiently and the printer will connect to the WiFi within 1 minute. If not matched, please reset and repeat the above steps. Note: The factory default IP address of the printer is 192.168.1.87. If the printer's IP address and the wireless router's IP address are not on the same network segment, you need to set the printer's IP address to ensure the two addresses are on the same network segment. For specific IP address settings, please refer to 3.2 "Ethernet" settings.

WEP key format, please select "ASCII code". The password can be defined by yourself.

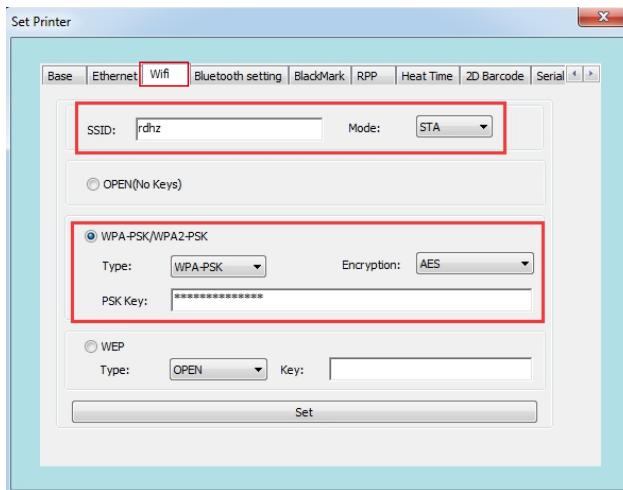

## (4) Bluetooth Settings


If the printer has Bluetooth function, you can set the Bluetooth parameters.

- a. First press and hold the FEED button of the printer, and then turn on the printer to print the self-test page. From the self-test page, find out the Bluetooth pairing name and password of the printer.
- b. The Bluetooth pairing name and password can be changed if necessary. At this time, the "Bluetooth Settings" function in the integrated setting tool needs to be used, as shown in the figure below.
- c. Enter the new "Device Name" and "Pin" for the printer Bluetooth, and click "Set".

After the printer is restarted, the settings are changed successfully.


- d. Power on the main device and search for the external Bluetooth device
- e. Find the Bluetooth printer just changed and enter the corresponding password to complete the pairing. When pairing, the printer must be on.

**⚠ Note:** During pairing, please do not turn on multiple printers at the same time; otherwise, you may not be able to judge which printer was successfully paired.

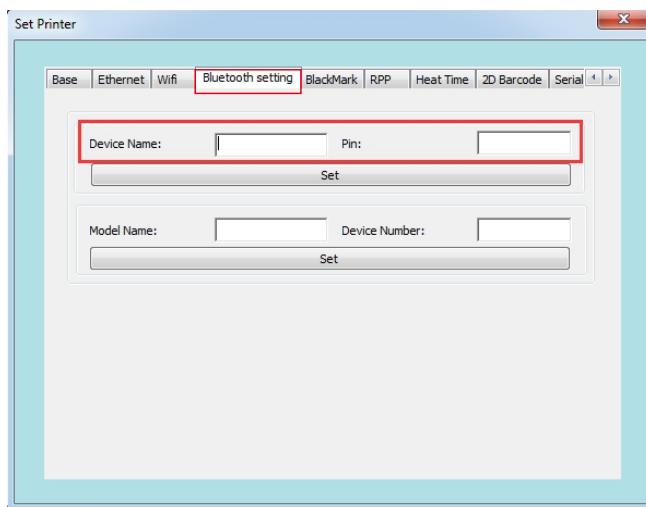


## (5) [Black label] Settings

- a. "Enable Black Mark" is used to enable the black mark function. The printer will beep once if it is enabled successfully;
- b. After enabling black mark, turn off the printer and then turn it on again. You must restart the printer before setting the black mark parameters.
- c. Enter the length of the black-marked paper, that is, the length of paper between the two black marks. The setting value should be greater than the actual length of the black-marked paper. For example, if the length of the black-marked paper is 200mm, the setting value can be 400mm. After inputting, click "Set". If the setting is successful, the printer will beep once.
- d. If you input 10mm for "print start position", the printer will start printing from the position 10mm after the black mark. After inputting, click "Set". If the setting is successful, the printer will beep once.
- e. The set width of the black mark should be greater than the actual value. If the actual width of the black mark is 10mm, the setting value can be 20mm. After inputting, click "Set". If the setting is successful, the printer will not beep.
- f. If you input 10mm for "paper-cutting position", the printer will cut paper at the position 10mm after the black mark. After inputting, click "Set". If the setting is successful, the printer will beep once.

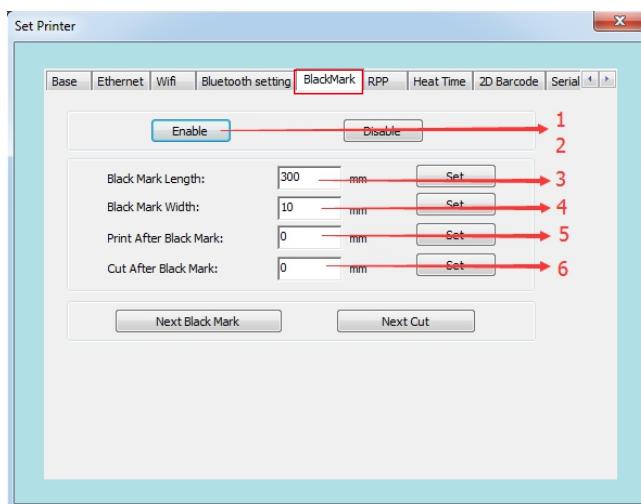


## (6) Movement heating time

Enter the required heating time, and then select "Settings". After setting, print a self-test page to check whether the heating time parameter has been changed to the set value.

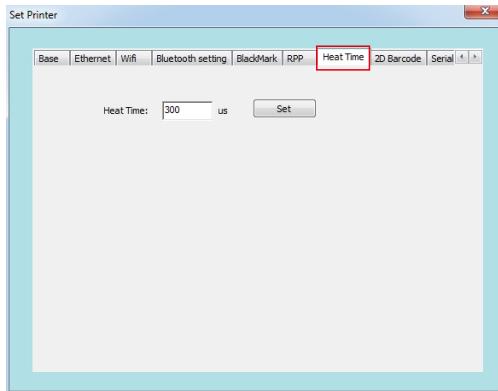


## (7) "QR Code"

This function can set the printer to "Enable/disable printing of QR code". After setting, print a self-test page to check whether the QR code can be printed.

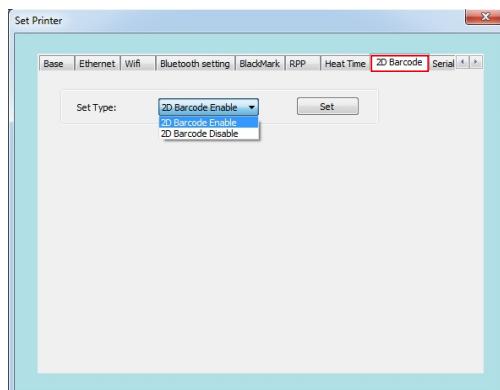


## (8) Serial port Settings

You can change the serial port parameters of the printer according to your needs, such as data bits, handshake signal protocol, etc.

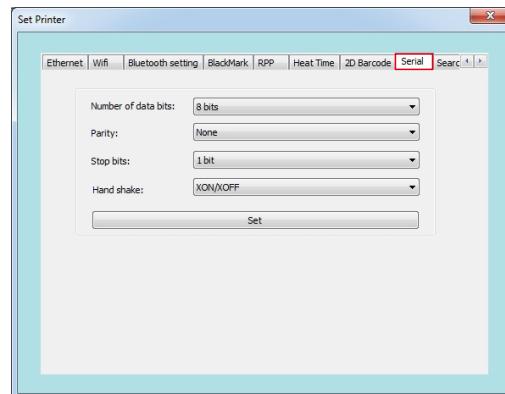


**⚠ Note:** After setting the serial port, the printer's serial port parameters have changed. You need to return to the main screen and reconfigure the serial port (the configuration parameters must be consistent with the parameters you modified)

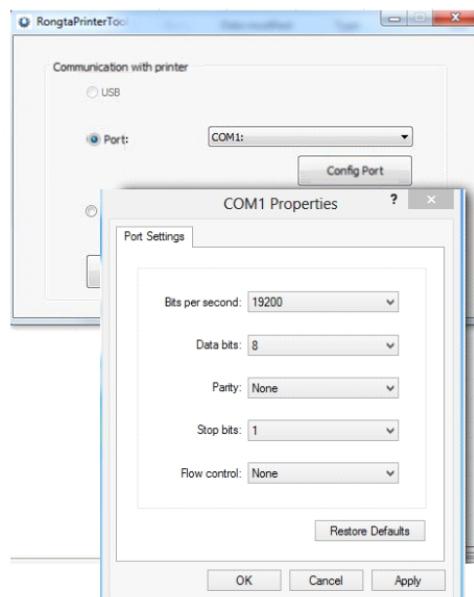


## (9) Search Printer

- a. Connect the network cable, select the network port, and set the corresponding IP address.

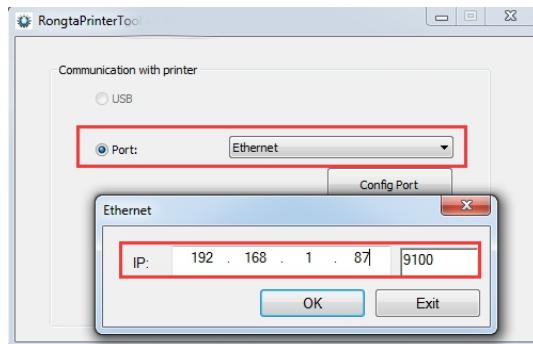


- b. Select "Search for Printer". After the printer is found, the corresponding MAC address, IP address, etc. of the printer will be displayed. Select the printer and then perform related configuration or operation.

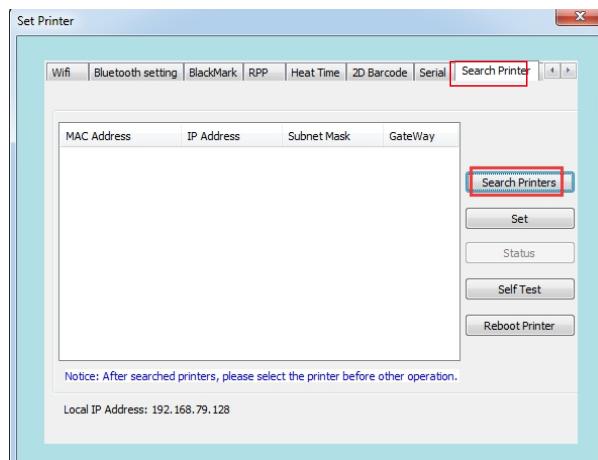


## (10) Command Type Setting

There are two types of commands: label command and ESC/POS command.

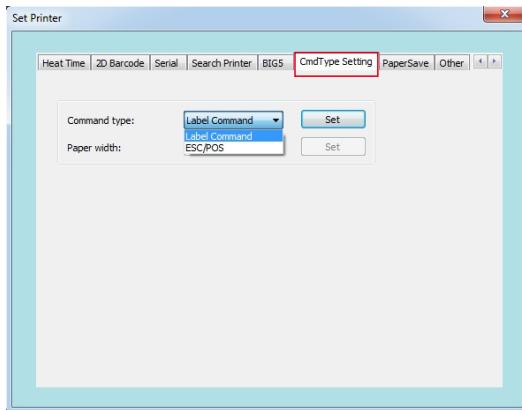


## (11) Paper saving

As shown in the figure below, the paper saving settings are on the left, and the right side is divided into normal paper and paper saving previews. After setting, click "Set"

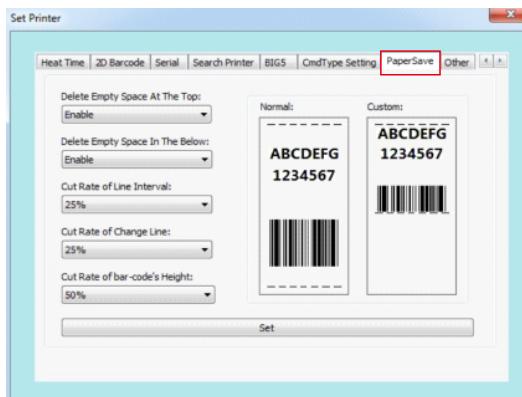


## (12) Other setting

You can set the serial number, etc. in "Others".

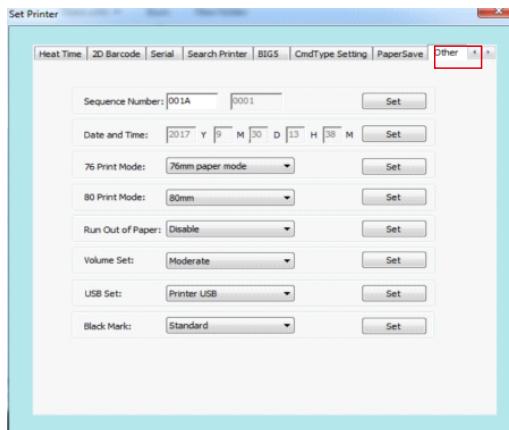

In USB setting interface (function), you can set USB as the virtual serial port and click "Set"; after successful setting, the printer will automatically shut down and you need to restart the printer manually; after restarting, go to the home screen to configure the serial port, and then the serial port printing function can be used. (Note: This function is a custom function, which cannot be used without special customization)

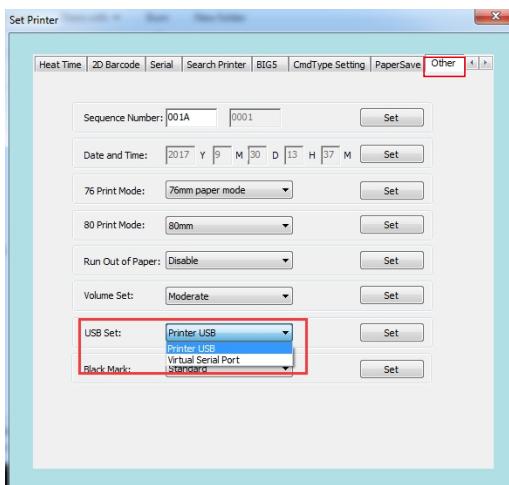

## V. Page change parameter operation description


In addition to using the WINDOWS application software provided by us, the printer can also update the network port parameters through the browser (such as Internet Explorer /Firefox).

### 5.1 Obtaining the IP address of the Printer

Connect the printer to the power adapter, press the FEED key and turn on the power switch, wait 1-2 seconds for the printer to automatically print out the self-check page, and find the IP address in the description of the self-check page, the default is 192.168.1.87.

### 5.2 Connect the printer


#### (1) Direct connection with network cable

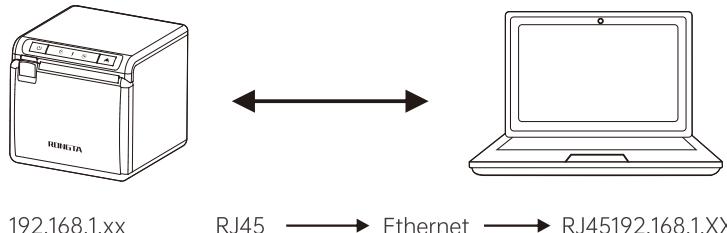

Printer and PC shall use the IP Address of the same network segment, for example 192.168.1.xx

For example, printer: 192.168.1.87, PC: 192.168.1.87

#### (2) Connect through a network device

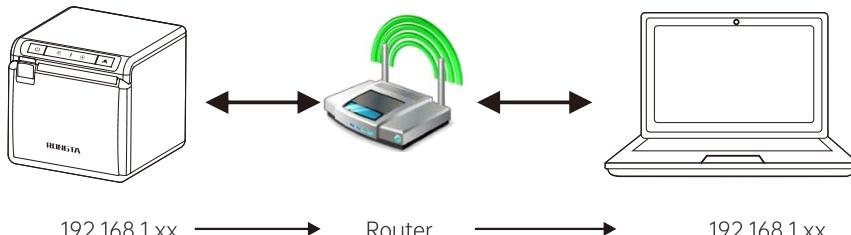

Printer and PC shall use the IP Address of the same network segment, for example 192.168.1.xx

For example, printer: 192.168.1.87, Router: 192.168.1.1, PC: 192.168.1.87

## 5.3 Change parameters

### (1) Set pages

Open a browser, for example Microsoft IE, enter the printer IP address, and then press Enter.



### (2) View interface information

After entering the web page, you will first see the printer interface information

#### Ethernet WebConfig Version 1.00

Interface Status  
Printer Status  
Configure Interface

Interface Status  
View the current status of the interface module.

Mac Address 168-1-87-18-52-86  
IP Address 192.168.1.87  
Subnet Mask 255.255.255.0

Refresh

### (3) View the current status of the printer

Click the link "Printer Status" on the left to view the printer status:

- 5.1 Whether the upper cover is open.
- 5.2 Whether there is diffusion knife error.
- 5.3 Whether the printing paper runs out.
- 5.4 Whether the printing paper is about to run out.
- 5.5 Whether the printer is offline,As shown in the following figure

Interface Status  
Printer Status  
Configure Interface

Printer Status Check the status of the connected printer.

Cover Is Open	Yes
Cutter Error	No
Paper End	Yes
Paper Near End	No
Printer Off-Line	No


Print Test Page Refresh

Click 【Print Test Page】 , to print a self-test page.


Click 【 Refresh】 to refresh the page and view the latest status.

## 5.4 Set Ethernet port parameters


Click "Configure Interface" to enter the Ethernet port parameters setting interface

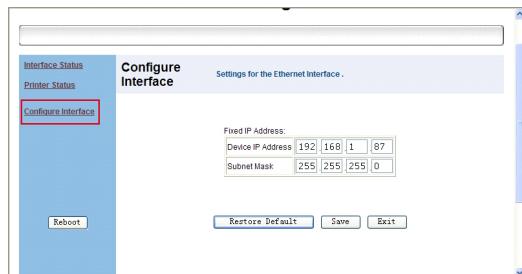


Enter a new parameter, as shown below, new IP:192.168.1.86, and click Save.

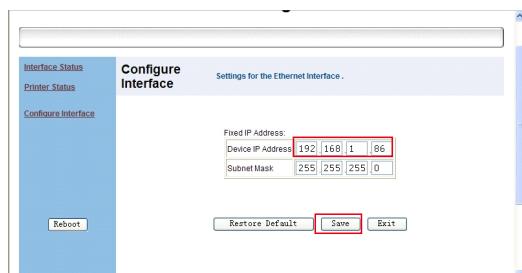

A dialog box appears, as shown in the following figure, select OK.

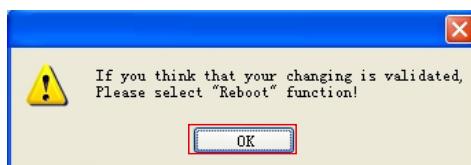

Then click the Reboot button on the left to restart the printer. The dialog box appears and select OK, as shown below

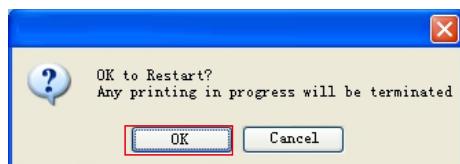

After clicking OK, the interface as shown below appears.



Wait a few seconds, hear the printer "drip" sound, indicating that the restart is complete. The network port parameters have been modified. To continue, enter the latest IP address in your browser and repeat the steps above. As shown in the figure below.



## VI. Clean the printer

---


### 6.1 Clean print head

The print head should be cleaned when one of the following occurs in the printer:

- (1) the print is not clear;
- (2) A vertical column of the printed page is not clear;
- (3) The paper feed noise is large.

Print head cleaning steps are as follows:

- (1) Turn off the power of the printer, open the front cover, if there is paper, remove the paper;
- (2) If you have just finished printing, wait for the print head to cool completely;
- (3) Wipe the dust and stains on the surface of the print head with a soft cotton cloth dipped in alcohol;
- (4) Wait for the alcohol to completely volatilize, close the front cover, and re-test the printing machine.

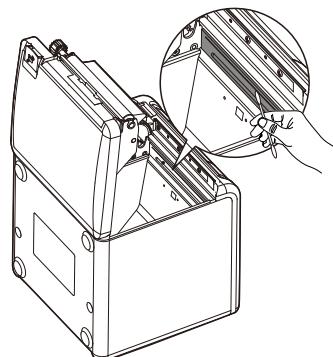

### 6.2 Cleaning sensor

When the printer has one of the following conditions, the paper sensor should be cleaned:(1)

During the printing process, the printer occasionally terminates the printing and alarms the lack of paper;(2) No alarm for lack of paper.Clean the sensor as follows:(1) Turn off the power of the printer, open the front cover, if there is paper, remove the paper;(2) Wipe the dust and stains on the sensor surface with a soft cotton cloth dipped in alcohol;(3) Wait until the alcohol is completely volatilized, close the front cover, and re-test the machine.


## 6.3 Clean the printing roller

When the printer appears one of the following conditions, the printing roller should be cleaned:

- (1) the print is not clear;
- (2) A vertical column of the printed page is not clear;
- (3) The paper feed noise is large.

Printing roller cleaning steps are as follows:

- (1) Turn off the power of the printer and open the front cover;
- (2) Wipe the dust and stains on the surface of the printing roller with a soft cotton cloth dipped in alcohol;
- (3) After the alcohol is completely volatilized, close the top cover.

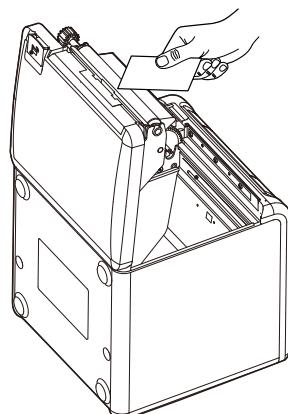

### Note:

- (1) The power supply must be turned off during daily maintenance of the printer.
- (2) Do not touch the surface of the print head with hands and metal objects, and do not use tools such as tweezers to scratch Print heads, print rollers and sensor surfaces.
- (3) Do not use gasoline, acetone and other organic solvents.
- (4) Wait until the alcohol is completely volatilized, and then turn on the power to continue printing.

## VII. Troubleshooting

---

---

If the printer is faulty, refer to this section to rectify the fault. If the problem still cannot be rectified, Please contact your distributor or manufacturer.

### 7.1 Indicators on the control panel are off

Check that the power cord is properly plugged into the printer, power adapter, and power outlet. Check that the power switch of the printer is on.

### 7.2 The indicator is normal, but the printer does not print

Run a self-test to check that the printer is working properly. If you can't self-check, please check with the dealer or Contact technical service personnel.


If the self-test works properly, check the following:

(1) Check the interface at both ends of the connection between the printer and the computer. At the same time, verify that the connection meets the specifications of both the printer and the computer.

(2) Data transfer Settings between the printer and the computer may differ. You can use self-test to print out the interface Settings of the printer. If the printer does not print, contact your dealer or technical support.


## 7.3 Clear paper jam

When the printer occurs paper jam, first turn off the power of the printer, open the front cover of the printer, carefully remove the paper stuck in the printing head after cooling, and then correctly on the paper, cover the front cover. Choose recommended or equivalent quality, in line with the width of the printer paper is not easy to jam. (as shown in the picture below)

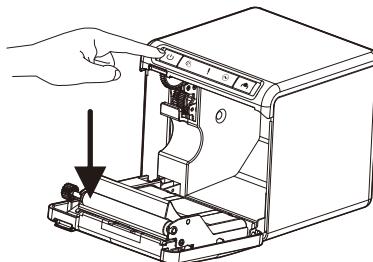


## 7.4 Clearing clip

When the printer is stuck, open the top cover, it is recommended to use a screwdriver or a relatively hard tool to pry it open from the mouth of the paper. After the top cover is opened, it is recommended to open the front cover, and then press the power button again to automatically return the knife, and re-cover the top cover after the knife is returned. Start printing again. (as shown in the picture below)

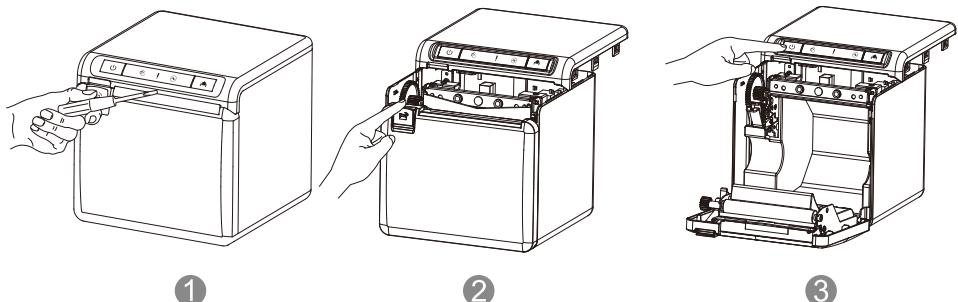

# Appendix 1 Interface information


## Printer interface

Diagram	Generic type	Instructions
	USB	Universal USB interface (Standard Type B)
	Network interface	Standard RJ-45-8P interface, 10M/100M transmission speed adaptive, 100M network LED indication, data communication LED indication.
	Cash box control	6-wire RJ-11 socket, output DC 24V/1A The power signal drives the cash box action.
	Power interface	Power plug DC 24V
	Serial interface	Db9 Female port. The communication baud rate is 9600bps, 38400bps, 19200bps, or 115200bpsOptional (can be adjusted using the printer Settings tool) Data structure: No parity, 8 data bits, 1 stop bit, Support RTS/CTS and XON/XOFF handshake protocols

☺ Note: The interface is optional or customized. The specific interface is subject to the actual object

### (1) USB interface


The USB interface socket of the thermal ticket printer is standard USB type-B



Pin number	Definition
1	VBUS
2	D-
3	D+
4	GND

## (2) Ethernet interface


The Ethernet interface socket of the thermal ticket printer is standard RJ-45-8P, supporting 10M/100M network, and the transmission speed is adaptive.

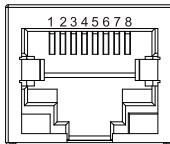

Pin number	Description	Instructions
1	TX+	Send differential line +
2	TX-	Send differential line -
3	RX+	Receive differential line +
4	NC	non-function
5	NC	non-function
6	RX-	Receiving difference line -
7	NC	non-function
8	NC	non-function

### (3) Cash box interface

The printer's cash box mouth adopts RJ-11 standard, 6-wire socket, output DC 24V/1A power signal to drive the cash box action. Insert the RJ-11 crystal tip of the cash box into the cash box connector to open the cash box through the printer.

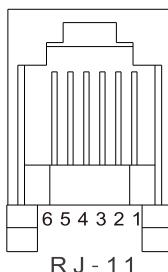


The pin functions of the printer's cash box interface are defined as follows:

Pin number	Signal	Instructions
1	GND	Electrically
2	Dk1	cash box 1# negative terminal
3	DK-1N	Enable detection
4	PWR	Power/cash box positive
5	Dk2	cash box 2# negative terminal
6	GND	Electrically

☺ Select the interface definition above to purchase the cash box.

#### (4) Serial interface


The serial interface of 80mm thermal receipt printer adopts RS-232 standard. The communication baud rate is 9600bps, 19200bps, 38400bps or 115200bps optional (adjusting via DIP switch). It is parity-free, 8-bit data bit, 1-bit stop bit; RTS/CTS and XON/XOFF handshake protocols are supported.



The functions of each pin of the printer serial interface are defined as follows:

Pin number	Model	Signal source	Description
2	TXD	Printer	The printer sends data to the host.
3	RXD	Host	The printer receives data from the host.
8	RTS	Printer	This signal reflects the current status of printer. A high electrical level indicates that the printer is "busy" and cannot receive data, while a low electrical level indicates that the printer is "ready" and can receive data.
5	GND	-----	Signal ground
6	DTR	Printer	Same as RTS signal (pin 8).

Schematic diagram of connection between printer serial interface and POS host serial interface:

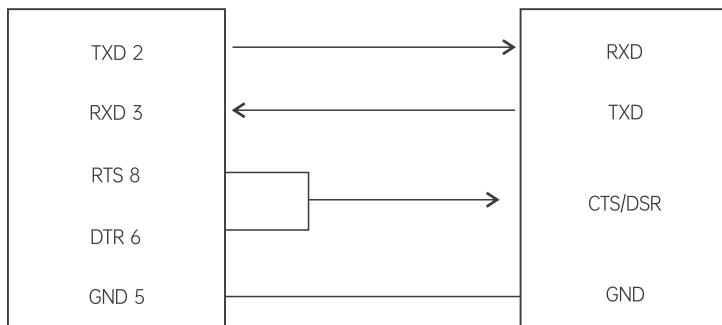

Printer serial interface DB9

POS host serial interface DB9

## Appendix 2 Description of special connection functions

---

---

### WIFI function (optional)

WiFi is a technology that allows electronic devices to connect to a wireless local area network (WLAN), currently used by company printers. The 2.4G radio frequency band is used. Connections to wireless LANs are usually password protected; But it can also be open, so that any device within the WLAN range can be connected. For specific WiFi setting steps, please refer to the "WIFI" setting in the thermal ticket printer tool manual.

### Bluetooth function (optional)

Bluetooth is a radio technology that enables devices to communicate over short distances (generally within 10m). Enables wireless information exchange between a wide range of devices including mobile phones, PDAs, wireless headsets, laptops, and related peripherals. The Bluetooth standard is IEEE802.15, which works in the 2.4GHz band with a bandwidth of 1Mb/s. Refer to the "Bluetooth" Settings in the integration tool setup manual.

#### a. Bluetooth pairing and printing (only valid for printers with Bluetooth)

Before working, the Bluetooth printer needs to be paired with the master device that drives the printer, and the pairing process is initiated by the master device.

The usual pairing method is as follows:

- (1) Turn on the printer
- (2) The master device searches for external Bluetooth devices
- (3) If there are multiple external Bluetooth devices, select the printer corresponding to the BDA address (see the self-test page)
- (4) Enter the initial password "0000" or "1234"(5) Complete the pairing.

Please refer to the main device Bluetooth function description for specific pairing methods. When pairing, the thermal receipt printer with Bluetooth interface must be turned on.

 Note: When pairing, do not turn on multiple printers at the same time, otherwise you may not be able to determine which printer is successfully paired.

After successful pairing, other master devices can still be paired with the printer, each printer can be paired with a maximum of 8 machines, if more master devices are paired with the printer, then the first master device with the printer will be automatically cleared from the pairing list, at this time if the master device needs to drive the printer to print, need to be paired again. (Only for multi-connected Bluetooth)

#### b. Print using Bluetooth interface (only valid for printers with Bluetooth)

For the main device with a virtual Bluetooth serial port (such as a SMARTPHONE, POCKET PC, PALM, notebook, computer, etc.), after pairing successfully, you can send print data to the printer through the virtual Bluetooth serial port for printing. If the master device does not have a virtual Bluetooth serial port, to drive the printer to print, please consult the master device supplier.



## Rongta Technology (Xiamen) Group Co., Ltd.

ADD: No. 889 Xinmin Avenue, Tongan District, Xiamen, China

WEB: [www.rongtatech.com](http://www.rongtatech.com) TEL: 0086-592-5666129

FAX: 0086-592-5659169

